

VANBOX

 Kata

Vanbox

Kit Installation

Installation Steps:

01.

Unpack the Vanbox Kit from the pallet carefully, ensuring that all components are intact.



02.

Position the box in the desired location within your vehicle, ensuring that it fits securely and does not obstruct any existing features.



03.

Remove the top piece of the boxes.



Installation Steps:

04.

Attach wheel arch supports from inside according to the numbers assigned to the box.



05.

Screw the supports in with 45mm black screws (*Black VanBox*) or 40mm golden screws (*White VanBox*).

If you are screwing the box to the floor follow steps 6–8, if you are strapping the box down follow steps 8–11.



06.

Pull the drawers out and screw through the base of the cabinet into the floor.



Installation Steps:

07.

Attach 6 screw in each box making your way towards the drawer.




08.

Place top back on the cabinet and reattach with screws.



09.


Lift the boxes up and attach the connector piece with screws from underneath.

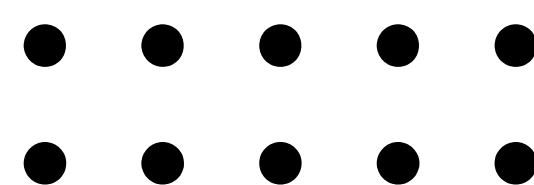

Installation Steps:

10.


Attach loops to the side of the box with small screws above the anchor points so that the straps with all be pull against each other.

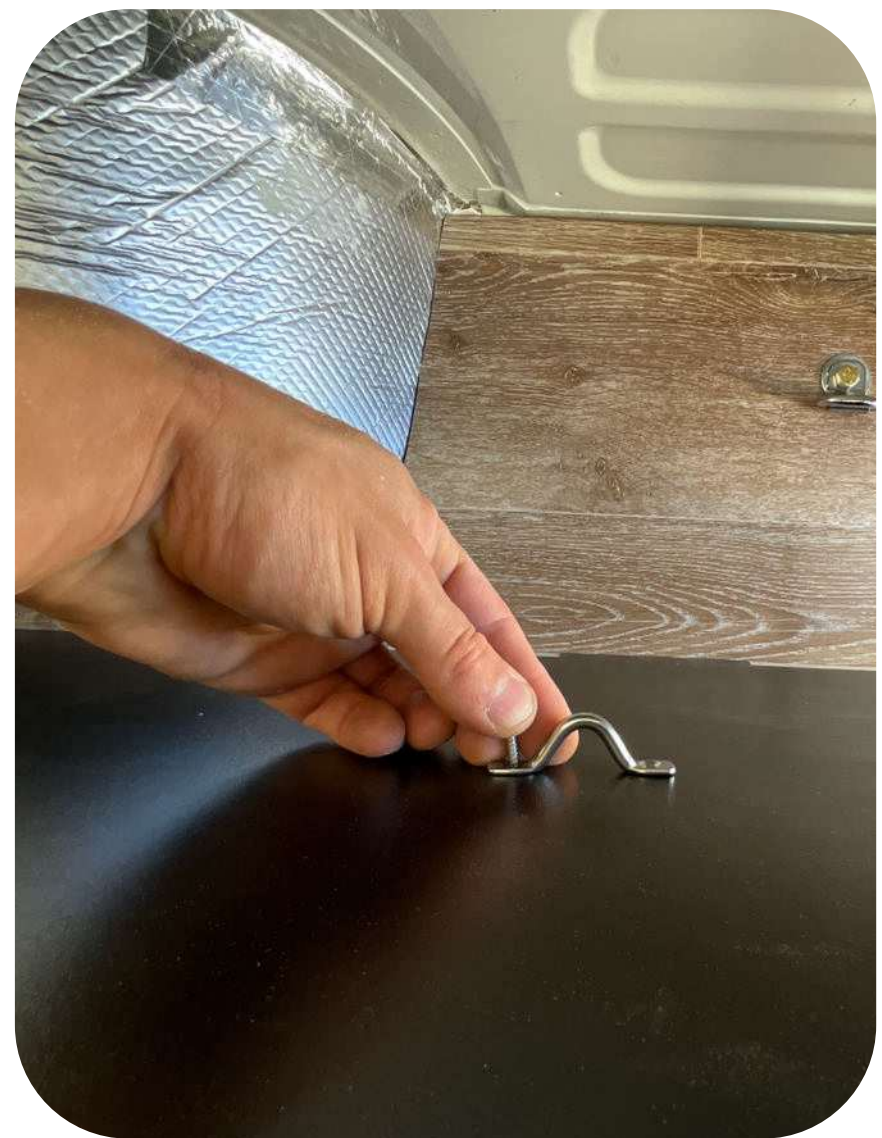

11.


Put the strap through the loop and the anchor point and tighten.

Once the box is fixed in position the wheel arches can now be attached.

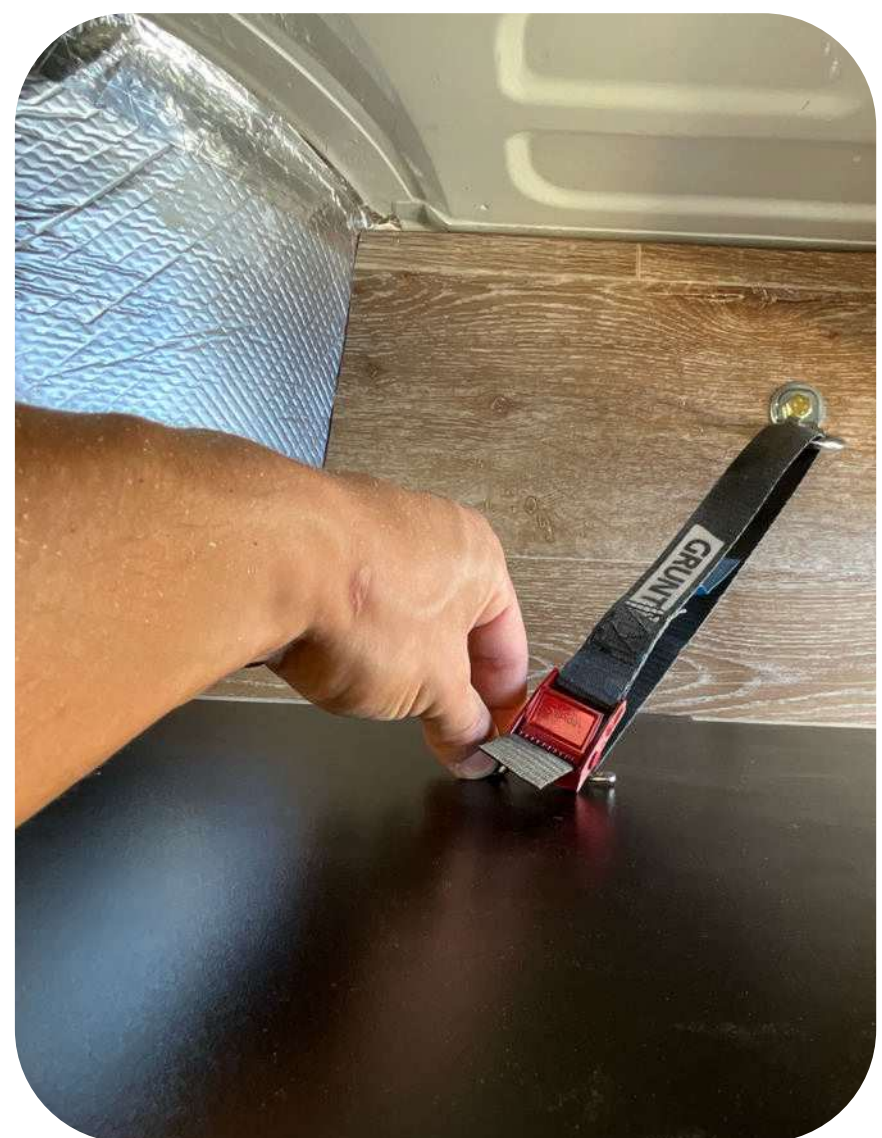

12.

Place the side of the wheel arches next to their position following the numbers that match with the box.

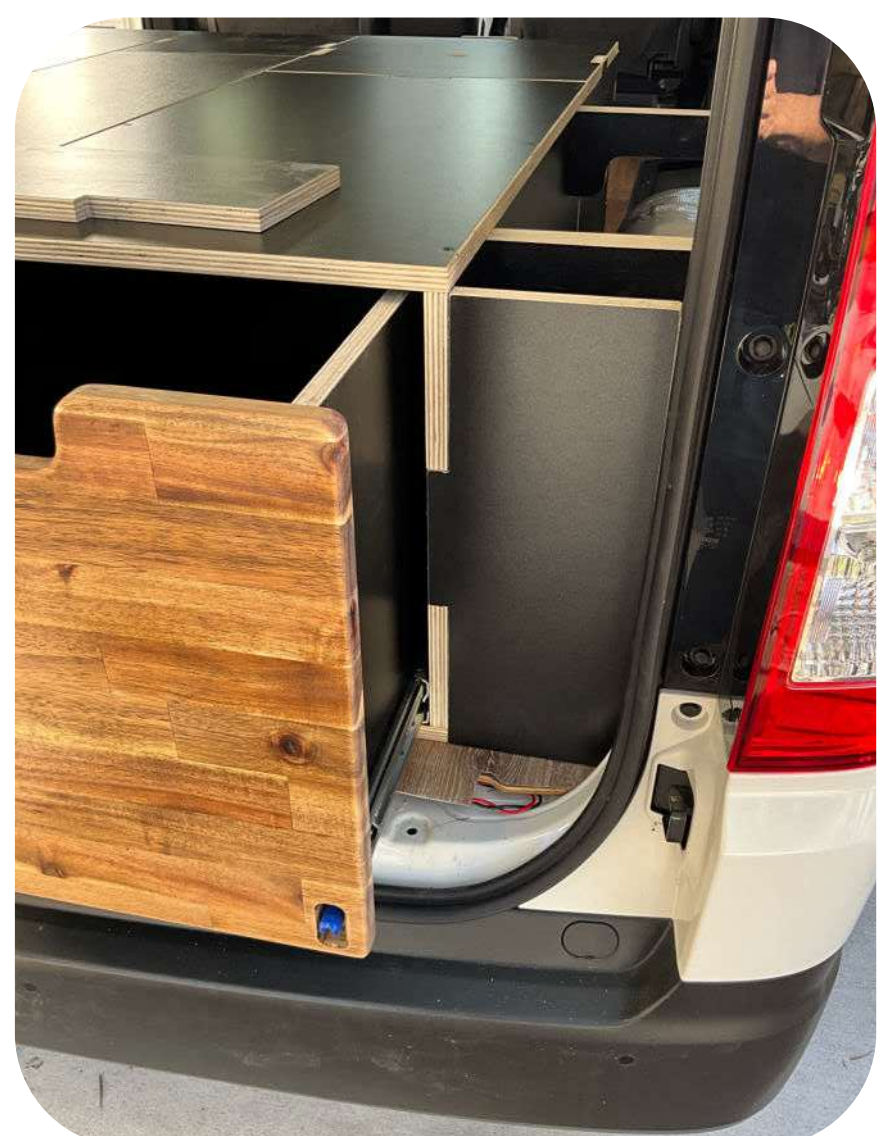

Installation Steps:

13.

Trace the shape of the vehicle or just measure the smallest distance between the box and the vehicle.




14.

Cut the side piece and repeat for all four corners.




15.

Screw the side piece into the main box.

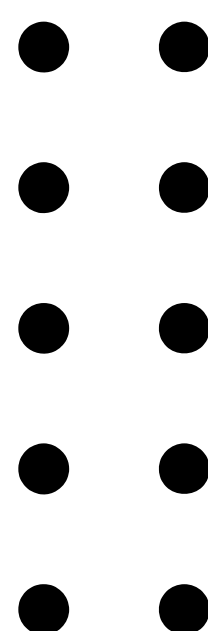


Installation Steps:

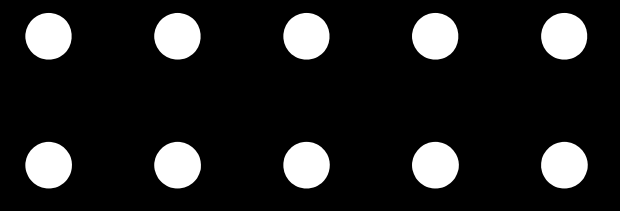


16.

Place the lids in their positions and trace the shape of the vehicle.

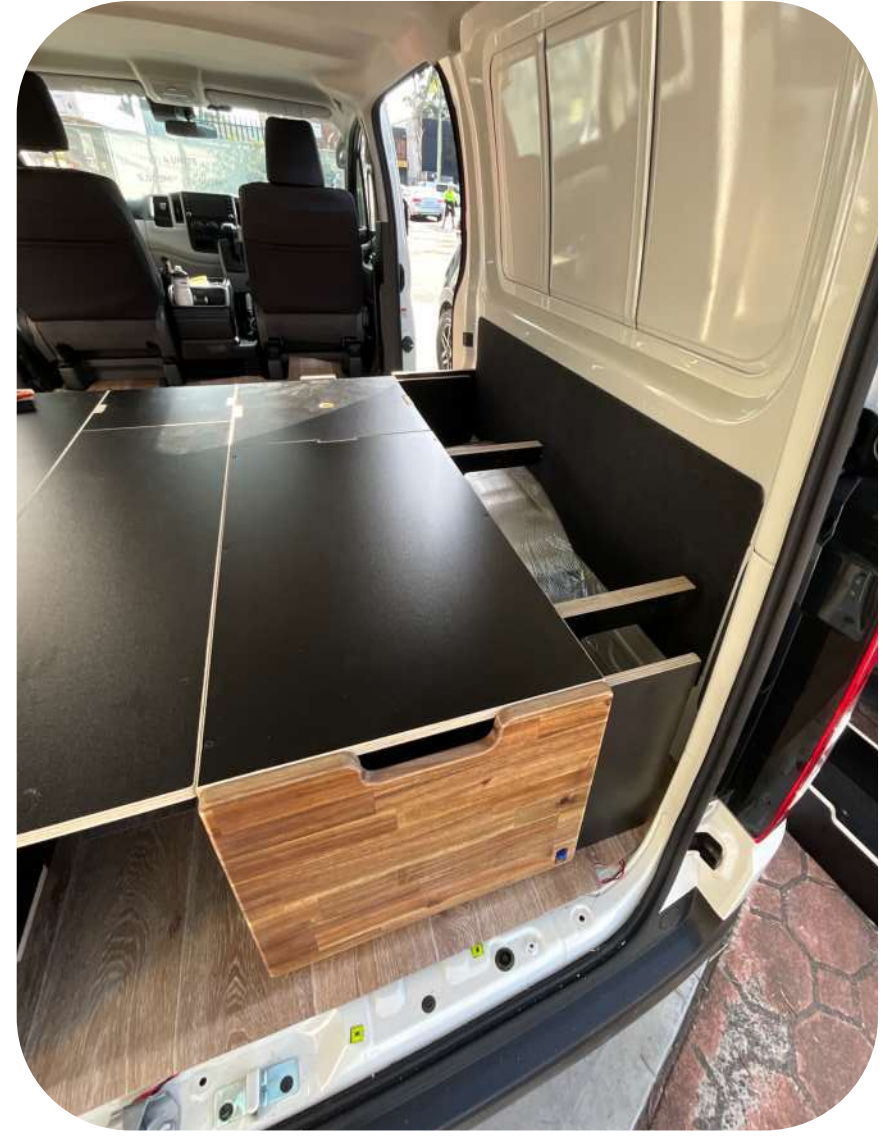

17.

Cut the shape, and place back in position.

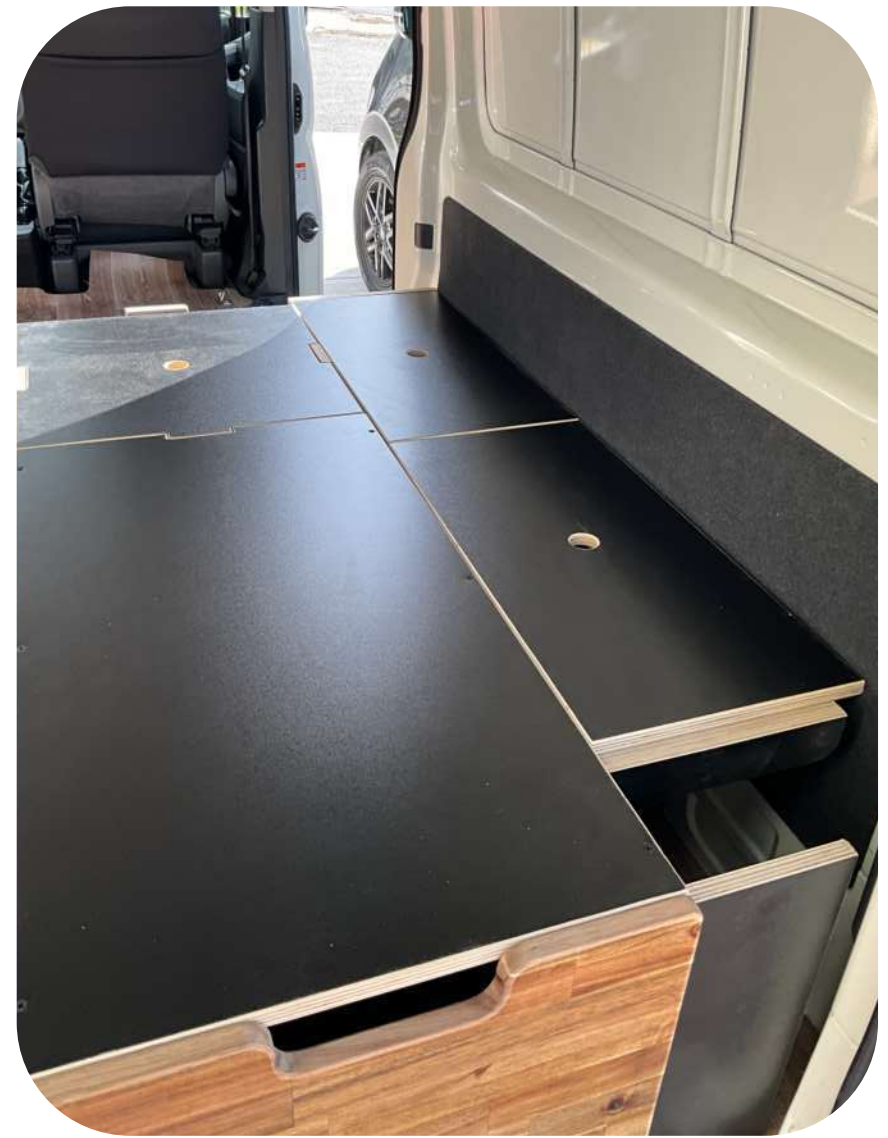

18.

Place the top piece according to the numbers provided.

19.

Trace the shape of the vehicle, cut, and attach with screws.




Installation Steps:



20.

Enjoy your Kata Vanbox!

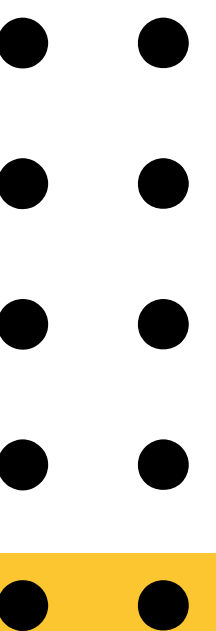



K a t a